

MC18

Mobile Computer

Accessories Guide



MC18 Series

CONFIGURATION &
ACCESSORY GUIDES are
available on The Source and
PartnerCentral

For access to additional product information including this guide, please visit:

www.zebra.com/mc18

Find Product Information in the EMC Product Portfolio on The Source and PartnerCentral





Step 1: Choose an MC18 configuration

WIN CE7

OPTION	PART NUMBER	DESCRIPTION
MEMORY	MC18A-00-KIT-XXX	512MB RAM, 2GB FLASH,
MEMORY	MC18G-00-KIT-XXX	1GB RAM, 4GB FLASH,
OHANTITY	MC18X-00-KIT-1X	1-pack,
QUANTITY	MC18X-00-KIT-10X	10-piece bulk pack,

ANDROID KITKAT

	OPTION	PART NUMBER	DESCRIPTION		
	Single or 10 pack	MC18G-00-KIT-01X	Single pack		
		MC18G-00-KIT-10X	10-piece bulk pack		



What Ships with every MC18



(Electronic User Guide loaded onto device)



Step 1: Choose a spare battery

MC18 Battery

MC18 2,275 mAh PowerPrecision + Lithium-Ion Battery PowerPrecision + Batteries: Advanced new battery technology integrated into our newest devices bringing a higher level of intelligence to deliver maximum performance

Information stored on each PowerPrecision+ battery:

- Continuously updated capacity as battery ages
- Charge accepted per type of charger
- Time to fully charge and time to fully discharge
- Elapsed time since first use
- Dynamically models the battery life based on historical usage

Supported features:

- Advanced state of health: actively measures and calculates the battery capacity under standard load conditions and temperature
- Advanced state of charge: time to empty under present usage and time to full under present charge condition



BTRY-MC18-27MAG-10


10-PK

Battery



STEP 2: Choose a charging method



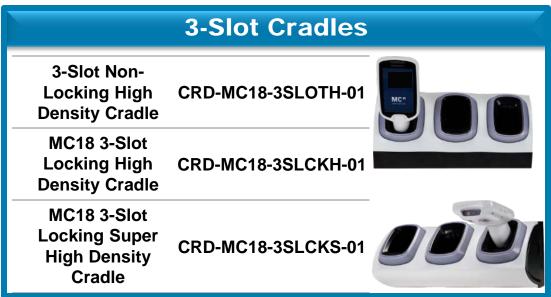



All MC18 Cradles require Interconnect cables, PWRS-14000-241R, DC line cord, and Country Specific AC line cord sold separately.


Cradle Accessories

Cradle Release Key (QTY-20)

KT-MC18-CKEY-20

Cradle Cover Removal KT-MC18-CTOOL-01



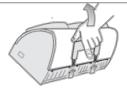

Used to mechanically unlock the MC18 Terminal from the 3-Slot Cradles and 1-Slot Cradles.

Designed to remove cradle top housing for the MC18 3-Slot Cradles where hand space is limited.



Step 4a: Choose cradle accessories

Power Supply

PWRS-14000-241R

PWR SPLY: 100-240VAC,12VDC, 9A.



Power Supplies for MC18 Cradles. Requires DC Line cord and Country Specific AC Line cord (sold separately)

DC "Y" Cables

<u>25-66210-01R</u> 19.5 Inch 25-67592-01R 1 Meter

CBL-MC18-Y2MET-01

Cable 2 Meter

DC "Y" Cables run from Power Supply to two separate charging cradles.

DC Cables

25-66420-01R

19.5 Inch

DC Charging Cable for 1-Slot Cradles Runs from the Power Supply to one charging cradle.

Cables



25-66431-01R Interconnection Cable

(12.6 Inch). Connects Cradles to each other to run off one power supply (PWRS-14000-241R).

Daisy Chain max = 6 Terminals per



CBL-MC18-EXINT1-01 Extension Cable

Cradle Power Extension Cable. Connects cradle to interconnect cable in order to lengthen cable and allow for easier installation.



25-66431-01R USB Cable

MC18 USB Client Communication. Cable for Cradle to the host system.



Step 4b: Choose cradle connection method: Single Slot Cradles

Step 1

Power Supply.




- Power Supply: PWRS-14000-241R
- AC Line Cord: AC Line Cord Matrix is located on the last page

Step 2

Select one **DC Cable** to connect power supply to a maximum of 9 or 12 cradles depending on step 3.

DC Cable

12.6 Inch: 25-66431-01R

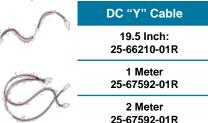

Step 3

Choose Number of Interconnection Cradles based on Charging Mode your required charging mode.

Standard - 1.0 AMP:

MAX: 12 Cradles/Devices

Fast – 1.5 AMPS:

MAX: 9 Cradles/Devices

3a. Standard Charging Mode

Choose the number of cradle interconnect cables required based on the table below.

(12 Single Slot Cradles Max per Power Supply



Cradle Interconnect Cable (12.6 inch): 25-66431-01R

Number of Cradles	2	3	4	5	6	7	8	9	10	11	12
# of Interconnect Cables required	1	2	3	4	5	5	6	7	8	9	10

3b. Fast Charging Mode

Choose the number of cradle interconnect cables and power extension cables required based on the table below.

(9 Single Slot Cradles Max per Power Supply)



Cradle Interconnect Cable (12.6 inch): 25-66431-01R

Number of Cradles	2	3	4	5	6	7	8	9
# of Interconnect Cables required	1	2	3	4	5	5	6	7



Step 4b: Choose cradle connection method: 3-Slot Cradles

Step 1

Power Supply.



- Power Supply: PWRS-14000-241R
- AC Line Cord: AC Line Cord Matrix is located on the last page

Step 2

Select one **DC Cable** to connect power supply to a maximum of 9 or 12 cradles depending on step 3.

DC Cable

12.6 Inch: 25-66431-01R



DC "Y" Cable

19.5 Inch: 25-66210-01R

1 Meter 25-67592-01R

2 Meter 25-67592-01R

Step 3

Choose Number of Interconnection Cradles based on Charging Mode your required charging mode.

Standard - 1.0 AMP:

MAX: 4 x 3-Slot Cradles / 12 Devices

Fast – 1.5 AMPS:

MAX: 3 x 3-Slot Cradles / 9 Devices

3a. Standard Charging Mode

Choose the number of cradle interconnect cables and power extension cables required based on the table below.

(4 Connected Cradles Max)







Interconnection Extension Cable: CBL-MC18-EXINT1-01

3b. Fast Charging Mode

Choose the number of cradle interconnect cables and power extension cables required based on the table below.

(3 Connected Cradles Max)








Interconnection Extension Cable: CBL-MC18-EXINT1-01

Number of Cradles	2	3	4	Number of Cradles	2	3
# of Interconnect Cables required	1	1	2	# of Interconnect Cables required	1	1
# of Extension Cables required	2	3	4	# of Extension Cables required	2	3



Step 5: Choose cradle accessories

Keys and Tools Used to mechanically unlock the MC18 Terminal from the 3-Slot & Single-Slot Cradles. **Cradle Release Key** KT-MC18-CKEY-20 (QTY-20) This tool can be reused to reboot the MC18 terminal by connecting and holding the pins on the tool to the terminal while holding down the scan key for 10 seconds **Terminal Reboot Tool** KT-MC18-REBOOT-05 (5-PK) Cradle Cover Removal Tool. The MC18 Cradle Cover Removal tool aids in the removal of the top housing of the 3-Slot Cradles. Cradle Cover Removal KT-MC18-CTOOL-01 Tool (QTY-1)

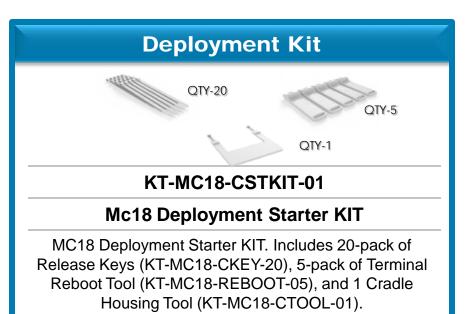





Step 6: Choose an AC line cord

Country	Three Wire Grounded AC Line Cord
Abu Dhabi	50-16000-220R: 1.8M long, CEE 7/7 plug.
Australia	50-16000-217R: 1.9M long, AS 3112 plug.
Bolivia	50-16000-220R: 1.8M long, CEE 7/7 plug.
Brazil	50-16000-727R: 18AWG, 250V, 16A, BR (3w).
China	50-16000-217R: 1.9M long, AS 3112 plug. 50-16000-257R: 1.8M long, IEC 60320 C13 plug.
Dubai	50-16000-220R: 1.8M long, CEE 7/7 plug.
Egypt	50-16000-220R: 1.8M long, CEE 7/7 plug.
Europe	50-16000-220R: 1.8M long, CEE 7/7 plug.
Hong Kong	50-16000-219R: 1.8M long, BS1363 plug.
India	50-16000-669R: 1.9M long, BS 546 plug.
Iran	50-16000-220R: 1.8M long, CEE 7/7 plug.
Iraq	50-16000-219R: 1.8M long, BS1363 plug.

Country	Three Wire Grounded AC Line Cord
Israel	50-16000-672R: 1.9M long, S132 plug.
Italy	50-16000-671R: 1.8M long, CIE 23-16 plug.
Japan	50-16000-218R: 1.8M long, NEMA 1-15P plug.
Korea	50-16000-220R: 1.8M long, CEE 7/7 plug. 50-16000-256R: 1.8M long, CEE7/7 plug.
Malaysia	50-16000-219R: 1.8M long, BS1363 plug.
New Guinea	50-16000-217R: 1.9M long, AS 3112 plug.
Russia	50-16000-220R: 1.8M long, CEE 7/7 plug.
Singapore	50-16000-219R: 1.8M long, BS1363 plug.
UK	50-16000-219R: 1.8M long, BS1363 plug.
US	23844-00-00R: 7.5 feet long. 50-16000-221R: 1.8M long, USA NEMA 5-15P.
Vietnam	50-16000-220R: 1.8M long, CEE 7/7 plug.



Optional custom branding



Please consult your local Sales Representative for more details